



The Autolatch is fitted on the sash and the pin is fitted to the frame of the window.

Top Hung

For handing, view from the inside and state the side of the window the Autolatch is required to operate from.

Side Hung

The Autolatch is always fitted at the bottom of the sash on side hung windows.

For handing, view from inside, whichever side the window is hinged on, that's the hand of the Autolatch.