

How to Change Filters

1. Remove Front Cover or Filter Covers.
2. Slide out Filters.
3. Filters can be cleaned by carefully using a vacuum cleaner, Filters should be replaced at least annually
4. Replace Filters by carefully sliding the replacement/cleaned filters.
5. ABD and ABS models use unequal Filters. When replacing Filters ensure the filter with the open section is fitted to the right hand side of the heat exchanger with the open section to the back of the unit, see illustration
6. Replace the Front Cover or Filter Covers.

