



### Instructions

#### Operation:

The unit can be used in two ways, as an extractor fan or a trickle ventilator.

For trickle ventilator facility use snib to open slide. This allows air to move naturally between inside and outside of window.

#### Bathroom Extract Fan: (Continuous Power with Humidistat)

1. Power to this fan cannot be switched off and will operate automatically by humidistat.
2. Use snib to open slide - ensure slide is open at all times when fan is running.
3. The humidistat will constantly monitor the humidity and automatically start the fan at low speed when it senses a significant rise.
4. The fan will automatically stop when the humidity drops to the humidistat determined level.
5. To start fan running regardless of humidity, for example to extract smells, pull cord. The humidistat will determine the length of time the fan will run.

#### Maintenance:

##### **WARNING - ISOLATE VENT-TREX FROM ELECTRICITY SUPPLY BEFORE CLEANING!**

The units are designed to be maintenance free under normal use. External faces to be cleaned using a damp cloth and mild domestic detergent. Stains not removable with soapy water may be removable using domestic non-abrasive cleaner. Do not use to excess as they may affect finish.

#### MARKETING DIVISION

International House, Peartree Road, Stanway, Colchester, Essex CO3 0JL

Tel: +44 (0) 1206 713800 Fax: +44 (0) 1206 543126 Web: www.titon.com