



### Instructions

#### Operation:

##### Kitchen Extract Fan: (Continuous running)

1. Fan will run continuously at low speed to ensure air movement.
2. Pull cord to switch fan speed from low to high or from high to low.
3. Fan will run at high speed for approx 7 minutes, then automatically reduce to low speed.
4. If for any reason the fan stops e.g. a power cut or a sudden air pressure change, the fan will revert itself for slow running. This takes approximately one minute.

#### Maintenance:

##### **WARNING - ISOLATE VENT-TREX FROM ELECTRICITY SUPPLY BEFORE CLEANING!**

The units are designed to be maintenance free under normal use. External faces to be cleaned using a damp cloth and mild domestic detergent. Stains not removable with soapy water may be removable using domestic non-abrasive cleaner. Do not use to excess as they may affect finish.

#### MARKETING DIVISION

International House, Peartree Road, Stanway, Colchester, Essex CO3 0JL  
Tel: +44 (0) 1206 713800 Fax: +44 (0) 1206 543126 Web: www.titon.com